


## Assigning Station Number

To assign a station a number:

- 1 Press PROGRAM.  
- The display will read "Program..."
- 2 Press the soft key under NEXT.  
- The display will show the currently assigned station number.
- 3 Press the soft key under CHANGE repeatedly, until the desired station number is displayed.

*The choices are Station #11 through Station #26*

- 4 Press PROGRAM to exit.

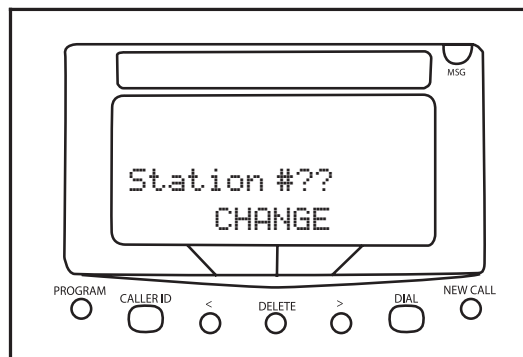

Until a telephone is assigned a station number, the telephone will not operate, and the display will read "Station #??". To assign this telephone a station number, simply press the soft key under CHANGE repeatedly until the desired station number is displayed.

Please Note: The "soft keys" reference above, are located under the LCD display. These are the "< DELETE >" buttons. The functionality of these buttons will change depending on the instruction written above the button in the LCD. For example, in the above illustration "CHANGE" = the "DELETE" button.

## Verifying Proper Installation

First, verify that line 1 is connected to the same telephone number at all the telephones. To do this, press the line 1 button at one of the telephones. The line 1 LED should be green, the speakerphone LED should be red, and dial tone should be heard from the speaker. Now go to each of the other stations and make sure that each line 1 LED is red.

Next, make sure that lines 2, 3 and 4 are connected the same at all the phones by following the following steps at each telephone:


1. Press the line 1 button. The line 1 LED should be green, the speakerphone LED should be red, and dial tone should be heard from the speaker.
2. Dial the telephone number for line 2. The line 2 LED should flash slowly. If the line 2 LED does not flash, then line 2 is improperly connected to this telephone.
3. If this telephone utilizes line 3 and/or line 4, repeat steps 1 and 2, substituting the respective phone number(s) in step 2.

# Quick Steps to Installing Your New Epic Phone

Congratulations on your recent purchase of the Epic Telephone. This exciting phone system is designed for easy installation. The following is a quick reference guide to help you through the initial set up.

## Packing List


Remove the unit from the package and check this list to be certain all parts are included:

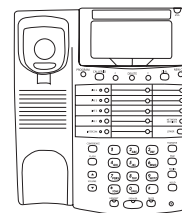


Telephone Base Unit




Handset

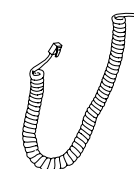

Coiled Handset Cord

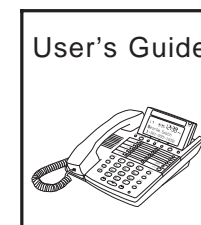


User's Guide

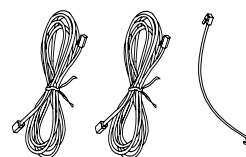


Telephone Line Cords  
(2 long and 1 short)



AC Adapter

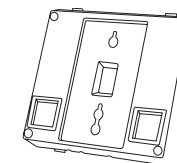


Wall Mount  
Bracket/Desk Pedestal



Two Desk  
Pedestal Feet

## Location of Controls

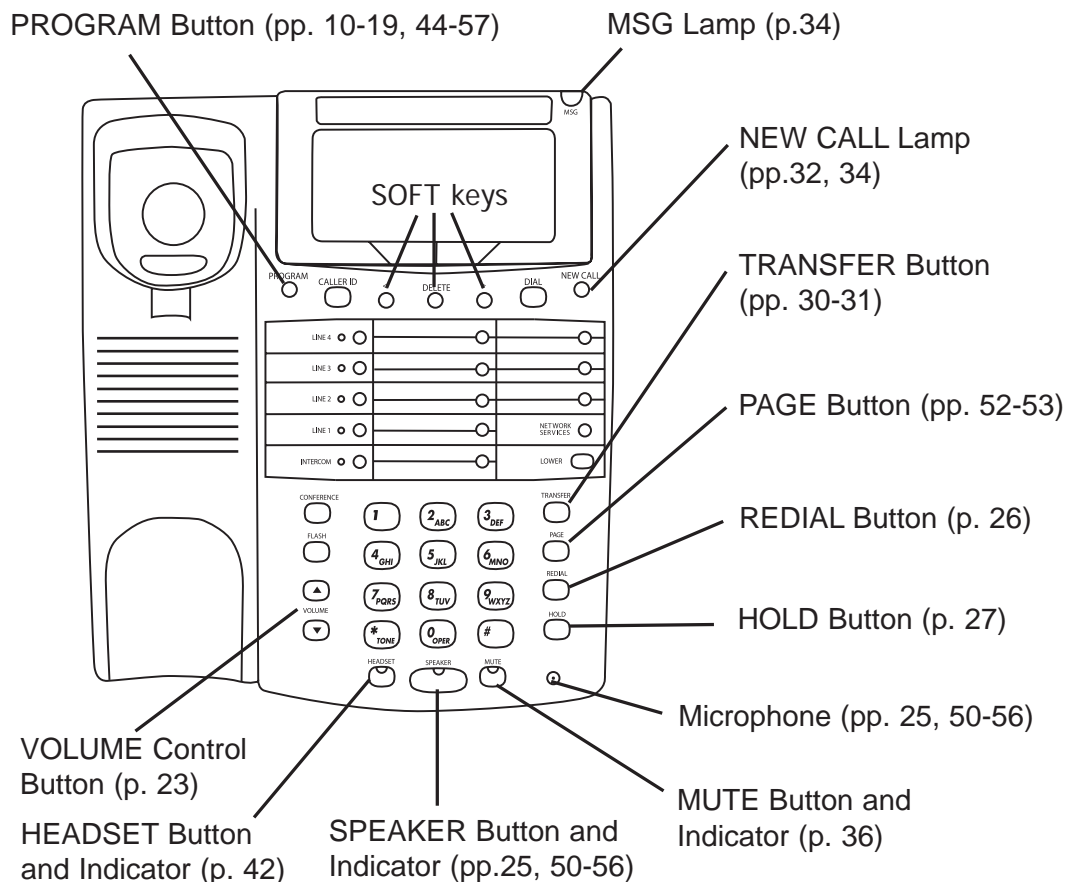

**IMPORTANT:** Each **Epic System** telephone must be connected to the same Line 1 telephone number for proper operation. The remaining lines may or not be connected to each station as you desire.

### Important Notes for DSL users:

If you are a DSL customer, you may experience interference with the advanced system features of your Epic telephone.

Certain features of this telephone work by sending a data or intercom signal over Line 1. These signals use some of the same frequencies that are used by the DSL service.

The microfilters that may have been provided by your DSL provider to prevent interference with telephones are **NOT** compatible with these Epic telephones, since these same filters will also block the data signals of the system from traveling between the phones.

The solution is to have a DSL splitter (not a microfilter) installed at your network interface. This way there will be one unfiltered line going directly to your DSL modem, and there will be one DSL filter, with the entire Epic system behind this filter.


Please contact your DSL service provider or installer for details about obtaining and installing a DSL splitter.

- 1.) See the User Guide pages 1-9, for detailed installation instructions.
- 2.) Install and check one Epic phone at a time.
- 3.) Check to see that your Epic system is properly installed and communicating. Please see the User Guide pages 74-75 for troubleshooting tips.

## Install Desk/Table Top Phones


### 1 Connect First Line Cord

Connect one end of a long telephone line cord to the jack on the bottom of the telephone labeled L1/L2. Connect the other end directly to the wall jack labeled lines 1 & 2. See page 4 of the User Guide.

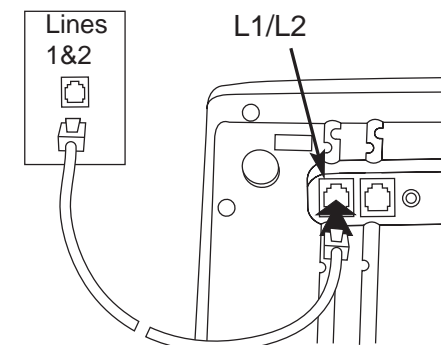


### 2 Connect Second Line Cord

Connect one end of a long telephone line cord to the jack on the back of the telephone labeled L3/L4. Connect the other end to the wall jack(s) labeled Lines 3 & 4 in the same manner as described in the previous step.

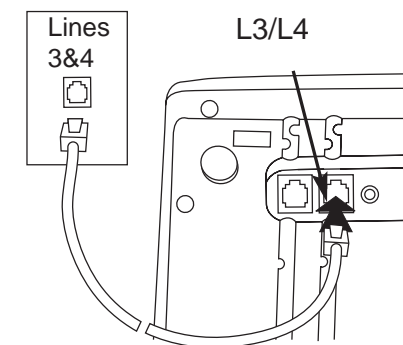


### 3 Connect Handset

Plug either end of the coiled handset cord into the handset and the other end into the jack on the side of the telephone. Place the handset in the cradle.

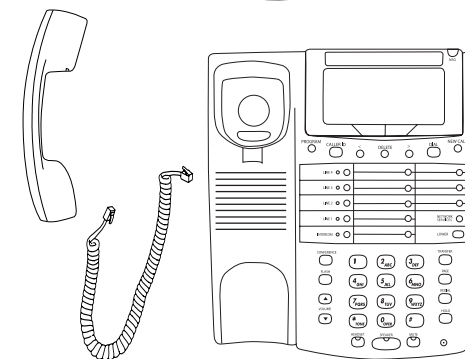

### 4 Connect Power Cord

Plug the AC power cord into the adapter jack on the bottom of the telephone. Thread the power cord into the recessed groove. Plug the AC adapter into an electrical outlet **not controlled by a wall switch**.

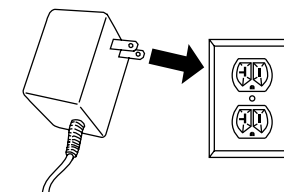

### 5 Assign a Station Number

Refer to page 8 for detailed instructions on assigning a station number. (or see back cover of this leaflet).

